




read the product description carefully



GREEN. INTERNATIONAL

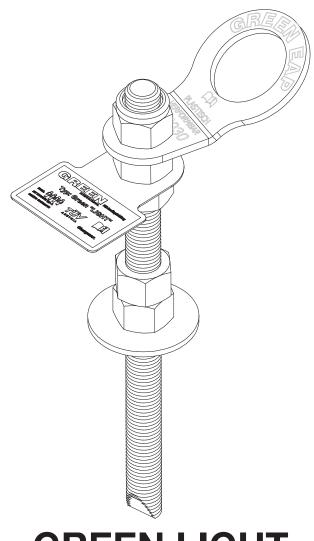

GREEN LIGHT

ENGLISH

© Green International GmbH. No liability for errors and printing errors. We reserve the right to make technical changes.



DE **ACHTUNG** Die Montage und die Verwendung der Sicherungseinrichtung ist erst zulässig, nachdem der Monteur und der Anwender die Original Aufbau- und Verwendungsanleitung in der jeweiligen Landessprache gelesen hat. ΕN **ATTENTION** Assembling and using of the safety product is only allowed after the assembler and user read the original installation and application instruction in his national language. FR **ATTENTION** Le montage et l'utilisation du dispositif de sécurité ne sont autorisés qu'après lecture par le monteur et par l'utilisateur de la notice d'origine de montage et d'utilisation dans la langue du pays concerné. IT **ATTENZIONE** reserve the right to make technical changes. Il montaggio e l'uso del dispositivo di sicurezza è ammesso soltanto dopo che il montatore e l'utente hanno letto le istruzioni per l'installazione e l'uso nella rispettiva lingua nazionale. **ES ATENCIÓN** No está permitido montar ni usar el dispositivo de protección antes de que el montador y el usuario hayan leído las instrucciones de montaje y uso originales en la lengua del respectivo país. PT **ATENÇÃO** A montagem e o emprego do mecanismo de proteção somente serão permitidos, após o montador e o usuário te-rem lido as instruções de uso originais, no respectivo idioma do país, sobre a montagem e o emprego do mesmo. NL **ATTENTIE** De montage en het gebruik van de veiligheidsinrichting is pas toegestaan, nadat de monteur en de gebruiker de originele montage en gebruikershandleiding in de desbetreffende taal gelezen hebben. printing HU **FIGYELEM** A biztonsági berendezés felszerelése és használata csak az után megengedett, miután a szerelést végző és a használó személyek a nemzeti nyelvükre lefordított, eredeti használati utasítást elolvasták és megértették. SL **POZOR** Montaža in uporaba varnostnih naprav je dovoljena šele takrat, ko sta monter in uporabnik prebrala originalna navodila za montažo in uporabo v konkretnem jeziku. CZ **POZOR** Montáž a používání zabezpeovacího zařízení jsou povoleny až poté, co si pracovníci provádějící montáž a uživatelé přečetli v příslušném jazyce originální návod k montáži a používání. DİKKAT TR Güvenlik tertibatının montajına ve kullanımına, ancak montaj teknisyeni ve kullanıcı, orijinal kurulum ve kullanma talimatını kendi ülke dilinde okuduktan sonra, izin verilir. NO **OBS** Monteringen og anvendelsen av sikkerhetsinnretningene er gyldige først etter at montøren og brukeren har lest den originale oppbygnings- og bruksanvisningen i det tilsvarende landets språk. SV OBS Säkerhetsanordningen får inte monteras och användas förrän montören och användaren har läst igenom konst-

ruktionsbeskrivningen och bruksanvisningen i original på resp lands språk.

FΙ **HUOMIO**

errors, We

errors

ģ


© Green International GmbH, No liability

Turvalaitteiden asennus ja käyttö on sallittu vasta, kun asentaja ja käyttäjä ovat lukeneet alkuperäisen asennus- ja käyttöohjeen omalla kielellään.

DA **GIV AGT**

> Montagen og brugen af sikkerhedsudstyret er først tilladt, efter at montøren og brugeren har læst den originale vejledning i samling og brug på det pågældende lands sprog.

> > LIGHT

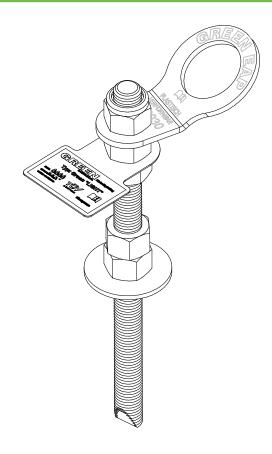

PROJECT DATA

SYSTEM DESCRIPTION

ASSEMBLY COMPANY

© Green International GmbH. No liability for errors and printing errors. We reserve the right to make technical changes.

LIGHT V-20.01.20

3



<u>5</u>

Table of Contents 1. General safety instructions 2. Technical date 2.1. Standards/approvals of the anchor device 3. Assembly in concrete 4. General notes 4.1. Personal Protective Equipment 4.2. Using the system 4.3. Note the planning fundamentals 4.4. Maintenance / inspections 5. Notified delivery point of the anchorage device 6. Fastening element "Green light" 7. Assembly protocol 8. Control sheet

1. General safety instructions

- The attachment to the GREEN anchorage device always happens with a carabiner to the anchorage eye and must be done with a harness in accordance with EN 361 and a force-absorbing fall absorber with lanyard (EN 355 and EN 354).
- Attention: For horizontal application, only fasteners suited for this purpose and for the corresponding edge designs (sharp edges, trapezoid sheet, steel beam, concrete, etc.) may be used.
- The Green Combination of individual elements of the equipment referred to can cause risks, because the safe functioning of an element can be impaired. (Note the respective operating instructions!)
- The entire safety system must be checked before use for obvious defects by visual inspection (e.g. loose screw connections, deformations, abrasion, corrosion, defective roof sealing, etc.).
- If there are doubts as to the safety of the security system, it must be inspected by an expert (written documentation).
- The entire safety product must at least once be subjected to an annual inspection by an expert. The inspection by an expert must be documented in writing.
- After a fall event, the further use of the entire system is to be avoided and must be checked by an expert (component parts, fastening to the ground, etc.).
- The GREEN anchorage devices were developed for personal safety and may not be used for other purposes. Never attach undefined loads to the safety systems.
- Do not make any changes to the approved anchorage devices.
- For sloping roofs, roof avalanches (ice, snow) must be prevented by suitable devices to intercept snow.
- If you provide the safety system to external contractors, the instructions for assembly and use are to be provided in writing.
- The anchorage device may only be installed by persons with a proper knowledge of the roof safety system.
- The system may only be installed or used by persons who are familiar with these operating instructions, as well as with the local safety regulations. They must be physically or mentally healthy and trained on PPE (personal protective equipment).
- Health restrictions (cardiac and circulatory problems, medication intake, alcohol) can affect the safety of the user when working at height.
- For mounting / use, the respective accident prevention regulations (e.g.: work on roofs) must be observed.
- There must be a plan covering rescue measures in all possible emergencies.
- Before commencing work, measures must be taken to ensure that no objects can fall down from the workstation. The area under the workstation (footpath, etc.) is to be kept free.
- The installers must ensure that the subfloor is suitable for the attachment of the anchorage device. In case of doubt, a structural engineer must be consulted.
- The anchorage device on the roof is designed for loading in all directions parallel to the mounting surface or perpendicular to the supports.
- If any uncertainties occur during assembly, please contact the manufacturer.
- The sealing of the roofing has to be carried out according to the relevant guidelines.
- The proper fastening of the safety system on the structure must be documented in logs and by photos of the respective installation situation.
- Stainless steel must not come into contact with grinding dust or steel tools. This can lead to corrosion.
- · All stainless steel bolts must be greased with a suitable lubricant before assembly.
- The anchorage point should be planned, installed and used so that falling over the edge is not possible with appropriate use of personal protective equipment.
- When accessing the roof securing system, the positions of the anchorage devices (e.g.: sketch of roof top view) are to be documented in design plans.
- The minimum clearance from the falling edge to the ground is calculated as:
- Manufacturer specification of the personal protective equipment to be used, incl. rope deflection
- incl. rope deflection
- + body size
- + 1 m safety margin.
- Attention: snow clearance at the facility require due to snow pressure load!

LIGHT V-20.01.20 5



2. Technical date

Length: 0 - 650 mm
Diameter: Ø 16 mm
Base plate: keine


Material: Edelstahl 1.4301

2.1. Standards/approvals of the anchor device

Green Light has been tested and certified according to EN 795: 2012-A + CEN / TS 16415: 2013-A The test was carried out statically and dynamically on the respective original substrate. Green Light is suitable as a substructure for fastening components of a horizontal lifeline system as an intermediate cable holder DIN EN 795: 2012 Type C. Green Light is not suitable for rope-supported work (EN 795).

Marking of the anchorage eye (EN 365)

- Manufacturer
- Product name
- standard
- Read instructions for use
- Batch number
- Max. Number of people

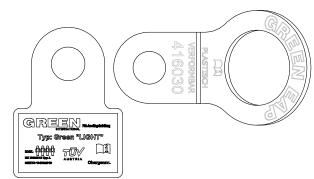

3. Assembly in concrete

- The concrete must be part of the static basic structure. If in doubt, this should be checked by a structural engineer.
- Only the fastening material supplied by GREEN International Fall Protection GmbH may be used. Individual parts may not be exchanged.
- The installation and operating instructions from GREEN International Fall Protection GmbH apply exclusively.
- The strength and assembly specifications of the fastening manufacturer also apply.

Fastening material: Multifix USF 280 or equivalent **Load capacity of the anchor device:** max. 4 users per anchor device


Substrate: concrete quality at least C20 / 25 DIN EN 206-1


cracked and non-cracked

Concrete thickness at least 120 mm


Borehole depth: at least 10 cm, borehole diameter: 18 mm, edge distance at least 10 cm


In the event of a wrong drilling, new drill holes must be arranged at a distance of at least 2 x the depth of the wrong drilling.

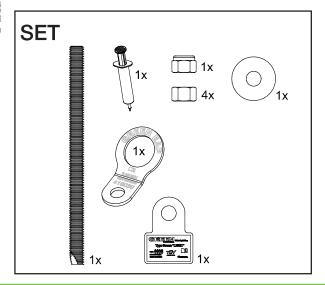


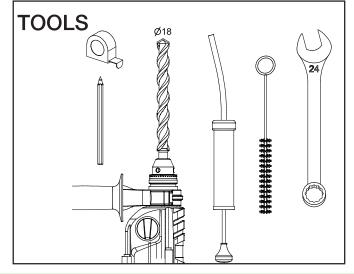




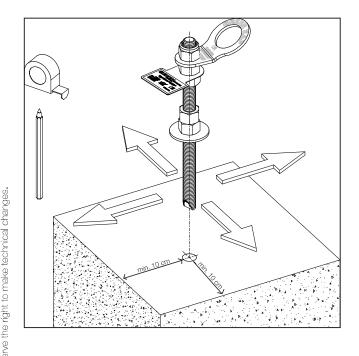

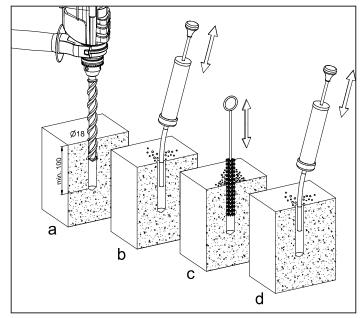

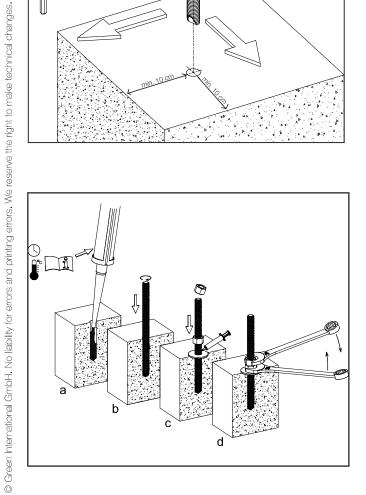

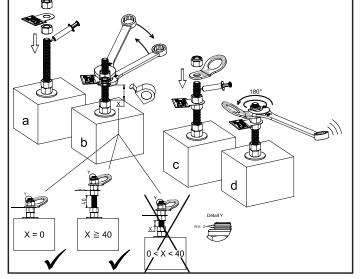

V-20.01.20

LIGHT



4. General notes

4.1. Personal Protective Equipment

Check harnesses, shock absorbers and carabiner hooks before each use for proper condition (damage). Do not use the anchorage device if there are doubts about its safe condition. In such case, the anchorage device must be checked by an expert or the manufacturer immediately and replaced if necessary. (See 8.4) Any anchorage device that experienced a fall case must be taken out of service and replaced by a qualified person or the manufacturer. The instructions for use of other products in conjunction with this product have to be considered.

4.2. Using the system

When using the anchorage device, it must be ensured that the slings are not exposed to fire or other heat sources. This leads to the immediate destruction of the slings. Furthermore, scraping or slipping over sharp edges should be avoided.

Run a visual inspection before using the system. Check the system for signs of damage, breakage, excessive wear or damaged holders.

The anchorage device must not be used if the personal protective equipment (PPE) cannot be fully connected or is damaged (e.g. corrosion, deformation).

4.3. Note the planning fundamentals

When used as a backup while leading, the distance between the anchorage points must be less than the distance from the roof edge.

4.4. Maintenance / inspections

The anchorage point must be subjected to an annual inspection by an expert person authorized by the manufacturer in strict accordance with the manufacturer's instructions. The controls are important since the safety of the user depends on the effectiveness and durability of the equipment.

5. Notified delivery point of the anchorage device



TÜV Wien Deutschstraße 10 1230 Wien

Green International GmbH, No liability for errors and printing errors, We



6. Fastening element "Green light"

For roof access (system access), this notice by the owner shall be placed and be clearly visible:

NOTES ON THE EXISTING ROOF SAFETY SYSTEM

The use is restricted to adhering to the assembly and use instructions.

The use is restricted to adhering to the assembly and use instructions.

•	Overview diagram showing the position o	f the anchorage devices
CARRELL MAINTENANT CONTROLLER OF THE STATE OF THE ST		
5		
D N		
D D A		
5		
D		
5.		
0 5		
Ď ∑		
-		
5		
) •	Manufacturer and system name:	GREEN Fastener element "Green light"
•	Date of last audit:	
•	Highest number of persons to be protected:	4 persons

The minimum clearance from the roof edge to the ground is calculated as:

Manufacturer specification of the personal protective equipment to be used, incl. rope deflection

Yes

- + body size
- + 1 m safety margin.

Need for energy absorbers:

LIGHT V-20.01.20



	ect:		Location of the ed	Location of the equipment:			
Product:				Zip code, city			
Client:		Contractor:	Contractor:		Installation firm:		
Company name	/ surname, first name	Company name / surname	Company name / surname, first name Street, house number Zip code, city		Company name / surname, first name Street, house number Zip code, city		
Street, house no	umber	Street, house number					
Zip code, city		Zip code, city					
Tel. (office, mob	ile)	Tel. (office, mobile)		Tel. (office, mobile)			
		Insta	llation protocol				
Date	Location	Anchoring ground	Fastening material (dowels, screws, etc.)		Tightening torqu		
		Photo	documentation				
_	Location	Photos / File Name					
Date							
Date							
Date							
Date							
The cl		erformance of the contractor.	Is and photo document	ation were made ava	ilable to the client /bu		
The cloop The acding co	ssembly and use ins wner) and have to b	tructions, installation protoco be made available to the user.	When accessing the sa	fety system, the pos			
The cl The as	ssembly and use insowner) and have to best (e.g.: sketch of ro	tructions, installation protoco e made available to the user. of top view) are to be docume	When accessing the sa ented by the building ov	fety system, the pos vner in design plans.	itions of the anchoraç		
The cl The aciding codevice The ex	ssembly and use ins wner) and have to bes (e.g.: sketch of ro spert confirmed with	tructions, installation protoco re made available to the user.	When accessing the sa ented by the building ov safety system that the in	fety system, the pos vner in design plans. Istallation work has b	itions of the anchoraç een performed propei		
The cl The adding condevice The exaccore	ssembly and use ins wner) and have to bes (e.g.: sketch of ro opert confirmed with ding to the current s	tructions, installation protoco be made available to the user. of top view) are to be docume mechanic responsible for the	When accessing the sa ented by the building ov safety system that the ir ding to the assembly an	fety system, the pos vner in design plans. Istallation work has b	itions of the anchoraç een performed propei		
The cl The adding condevice The exaccord	ssembly and use ins wner) and have to bes (e.g.: sketch of ro opert confirmed with ding to the current s	tructions, installation protoco be made available to the user. of top view) are to be docume mechanic responsible for the tate of technology and accord	When accessing the sa ented by the building ov safety system that the ir ding to the assembly an	fety system, the pos vner in design plans. Istallation work has b	itions of the anchoraç een performed propei		
The cl The as ding c device The ex	ssembly and use ins wner) and have to bes (e.g.: sketch of ro opert confirmed with ding to the current s	tructions, installation protoco be made available to the user. of top view) are to be docume mechanic responsible for the tate of technology and accord	When accessing the sa ented by the building ov safety system that the ir ding to the assembly an	fety system, the pos vner in design plans. Istallation work has b	itions of the anchorage een performed proper		
The cl The according to device The exactor according safety	ssembly and use ins wner) and have to bes (e.g.: sketch of ro opert confirmed with ding to the current s	tructions, installation protoco be made available to the user. of top view) are to be docume mechanic responsible for the tate of technology and accord	When accessing the sa ented by the building ov safety system that the ir ding to the assembly an	fety system, the pos vner in design plans. Istallation work has b	itions of the anchorage een performed prope		



8. Control sheet

	Performed activities		ntified iencies	Date	Company/ name/expert	Description of defects / measures	Date of the next periodic inspection
	System inspections	Yes	No				
al changes.	 No deformation of the individual parts can be detected 						
make technic	 all screws and connections tightened 						
e the right to	 ropes are without da- mage 						
ors. We	Visual inspection of the anchorage points and accessories (fasteners, etc.) by an authorized expert.						
ational GmbH. No lik							

^{***} In the event of a fall or in case of doubt, the anchorage de manufacturer or a specialist workshop for testing and repair. *** In the event of a fall or in case of doubt, the anchorage device must be immediately withdrawn from use and sent to the

When accessing the roof safety system, the positions of the anchorage devices must be documented by means of plans (e.g. sketches of the roof top view).

[©] This also applies to damage to the anchoring devices. The document must be filled in by the responsible person and kept safely with the instructions for use in a protected place (e.g.: house administration)



GREEN International Absturzsicherungs GmbH

Fabriksplatz 1/10, 4662 Steyrermühl Tel.: +43 7613 32498-0 Fax: +43 7613 32498-16

office@green-gmbh.at www.green-international.at